



Fig. 12

Fig. No.	Description	Part No.	Qty
	<u>Starter motor</u> , cpl., Bosch: EGD 0.6/6 AR 19	77800	1
	. Housing	N.S.S.	
12- 1	. Pole terminal	76586	4
12- 2	. Screw	115009	4
12- 3	. Field winding, coils 1 and 2	76587	1
	. Field winding, coils 3 and 4	76588	1
12- 4	. Insulating strip	72471	1
12- 5	. Connecting bolt with cable	76589	1
12- 6	. Base washer	48106	1
12- 7	. Insulating washer, inner	120651	1
12- 8	. Insulating bushing	18198	1
12- 9	. Insulating washer, outer	48104	1
12-10	. Spring washer	72473	1
12-11	. <u>End frame</u> , cpl.	76590	1
12-12	. . Bushing	76603	1
12-13	. <u>Commutator bearing</u>	76597	1
12-14	. . Bushing	76603	1
12-15	. . Brush <u>retainer</u> , positive	76598	2
12-16	. . Insulating plate	76599	2
12-17	. . Rivet	112064	4
12-18	. . Insulating bushing	120654	4
12-19	. . Insulating washer	48492	4
12-20	. . Brush <u>retainer</u> , negative	76598	2
12-21	. . Rivet	112005	4
	. . Set of carbon brushes, cpl.	233679	1
12-22	. . Carbon brush	N.S.S.	4
12-23	. . Screw	48068	2
12-24	. . Base washer	25407	2
12-25	. . Spring washer	906983	2
12-26	. . Screw	115114	2
12-27	. . Spring washer	906983	2
12-28	. . Brush spring	76601	4
12-29	. . Union cable	76602	1
12-30	. . Brake shoe	76604	2
12-31	. . Spring	76605	2
12-32	. . Washer	120648	1
12-33	. Screw	25687	2
12-34	. Base washer	86287	2
12-35	. Spring washer	906987	2
12-36	. Cover band	76606	1
12-37	. Gasket	76607	1
12-38	. Screw	25651	1
12-39	. <u>Rotor</u> , cpl.	76608	1
12-40	. . Guide pin for brake shoes	131015	1

Fig. No.	Description	Part No.	Qty.
12-41	. <u>Starter gear</u> , cpl.	76592	1
12-42	. . Starter gear, sep.	N.S.S.	1
12-43	. . Bushing	233478	1
12-44	. . Stop ring	76594	1
12-45	. . Thrust washer	48052	2
12-46	. . Spring, l = 1 1/2"	72749	1
12-47	. . Spring, l = 3/4"	48056	1
12-48	. . Stop ring	48058	1
12-49	. . Lock ring	48060	2
12-50	. Nut	48076	1
12-51	. Adjuster washer, Th. = 1.0	120656	1
	. Adjuster washer, Th. = 0.3	120657	*
12-52	. Lock ring	48077	1
12-53	. Cotter pin	907816	1
12-54	. <u>Coupling lever</u>	76595	1
12-55	. Bolt	76596	1
12-56	. Nut	151215	1
12-57	. Adjuster washer	120649	*
12-58	. Spring washer	906987	1
12-59	. <u>Solenoid switch</u> , cpl.	238102	1
12-60	. . Nut	906576	3
12-61	. . Insulating washer	77587	2
12-62	. . Base washer	25703	2
12-63	. . Lock washer	77586	1
12-64	. . Spring washer	906990	3
12-65	. . Screw	115103	1
	. . Base washer	238229	1
	. . Spring washer	906983	1
12-66	. Screw	902252	2
12-67	. Spring washer	906987	2
	Stud for starter motor	191165	2
	Nut	191170	2
	Lock washer	940147	2

\* Order as required.